

# CATER-WASH

## **Operating Instructions** for Cater-Wash Jolly Drain pump glasswasher



To avoid risk of damage to the appliance please read these instructions carefully

# CATER-WASH

# INSTRUCTION MANUAL MOD. EVO – FOR USER

- ENGLISH -

## INDUSTRIAL GLASS AND DISHWASHER, UNDERCOUNTER TYPE

### LETTER TO THE USER

Dear Customer,


This dishwasher is a safe machine when used as designed by the manufacturer, provided that the safety devices are maintained in good working order.

This document has the purpose to ensure: - The efficiency of all Safety devices upon receipt of the dishwasher; - Delivery of the user manual used in conjunction with the machine; - The operator's responsibility to respect all instructions in this manual. Please remember that only authorised and trained persons should use this machine.

The manufacturer relies on the user to carefully read and understand this manual in order to achieve the best performance from the machine. It is forbidden to reproduce any part of this manual without written approval. The manufacturer reserves the right to change features on the machine without prior notice.



DECLARATION OF CONFORMITY  
EUROPEAN DIRECTIVE  
2002/95/CE RoHS

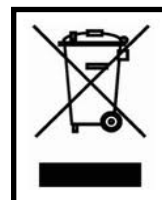


### SUMMARY

|                             |       |         |
|-----------------------------|-------|---------|
| Machine identification      | _____ | Page 02 |
| General notes on delivery   | _____ | Page 02 |
| General warnings            | _____ | Page 03 |
| Control panel               | _____ | Page 04 |
| Machine description         | _____ | Page 05 |
| Safety requirements         | _____ | Page 05 |
| User checks                 | _____ | Page 07 |
| Observations before washing | _____ | Page 08 |
| Operation                   | _____ | Page 09 |
| Cleaning                    | _____ | Page 12 |
| Information for users       | _____ | Page 16 |

## **MACHINE IDENTIFICATION PLATE**

For any communication with the manufacturer or its service centers, always give the serial number indicated on the machine. Record below the serial number of your appliance:

|                       |  |
|-----------------------|--|
| Model:                |  |
| Serial Number:        |  |
| Date of installation: |  |
| Service:              |  |

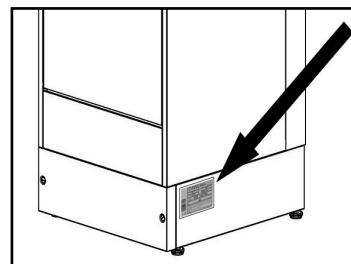

| REVISION | DATE | TECHNICAL AUTHORITY | NOTES |
|----------|------|---------------------|-------|
|          |      |                     |       |
|          |      |                     |       |
|          |      |                     |       |
|          |      |                     |       |
|          |      |                     |       |

## **GENERAL NOTES**

Upon receipt of the machine, check that the packaging is intact, that there are no missing parts or any damage. Check that the machine corresponds to the order (see delivery note).

All our equipments are always inspected, tested and packed at the factory and it is expected that the machine arrives with you in good condition. In case of any damage during transportation, keep the packaging and immediately contact the carrier.

The supply includes:

- ◆ Complete machine;
- ◆ Inlet and outlet tubes;
- ◆ Adjustable feet;
- ◆ Water flow reducer;
- ◆ User Manual;
- ◆ Certificate of Compliance;
- ◆ Baskets.

All dimensions indicated in the catalogue are not binding and refer to the standard machine. The drawings and any other documents delivered with the machine are property of the manufacturer, which reserves all rights. These documents cannot be made available to third parties. It is therefore forbidden to reproduce any part of this text or pictures.

## **GENERAL NOTES**

This dishwasher is in compliance with the current provisions in force concerning safety. Improper use may cause damage to people and / or property. Before starting the machine, carefully read these instructions, they contain important safety information. This manual is an integral part of the dishwasher and must be kept with the machine.

The dishwasher is only intended for professional use. It is designed for washing dishes (cups, glasses, plates, bowls, trays, cutlery) and for similar types of items in the field of food and catering. This machine complies with international electrical, mechanical and electromechanical safety norms.

Personnel operating the machine must be regularly trained. Only trained personnel should use it. The dishwasher is not suitable for use by minors or persons with reduced physical or sensory ability. The use of this machine by these people is permitted only under the supervision of a responsible person. Do not allow children to play with the dishwasher, there is the danger that they may be locked inside.

The manufacturer disclaims any liability for damage to persons or property caused by disregarding instructions of this booklet, by incorrect use or by interference with any part of the dishwasher. Replace any defective parts only with new original parts. This is the only way that the manufacturer guarantees the observance of safety standards and the correct operation of the machine.

Do not use the dishwasher as a ladder or to support people, objects or animals. Leaning or sitting on the open door could cause it tipping over and endangering people. Close the door to prevent people tripping over it.

Before installing this appliance, check that there are no damages visible. For your safety, never operate on a damaged machine.

Please ensure that earth connection has been done correctly. In case of doubts, have the system checked by a qualified technician. The manufacturer is not liable for any damage due to the interruption or absence of earth connection.

To carry out maintenance, disconnect the machine from the electrical supply. The machine is considered connected to the mains unless the general isolator switch is off.

Be careful when handling chemical products! These products, such as detergent and rinse aid, can be corrosive or irritant. Follow the safety regulations on the packaging! Wear goggles and gloves! Carefully follow the safety instructions provided by manufacturers. Do not inhale powder detergent. Ingesting detergent can cause burns to the mouth and throat and lead to suffocation.


After any work done to the water supply, purge the water pipes to the dishwasher to avoid damaging or clogging the water inlet valve.

Do not open the door when the machine is operating. There is a DANGER of splashing with hot water. If you open the door at the end of the cycle, take care not to touch the heating elements located into the wash tank (danger of burns).

Do not remove panels from the machine. Unintentionally touching electrical components is extremely dangerous for the user and may damage the machine.

For correct disposal of the machine, start by eliminating all traces of detergent in accordance with current safety standards (wear gloves and goggles). After that, the dishwasher must be disposed of according to applicable regulations at the time.

The manufacturer disclaims any liability for damages resulting from failure to observe warnings and safety instructions.

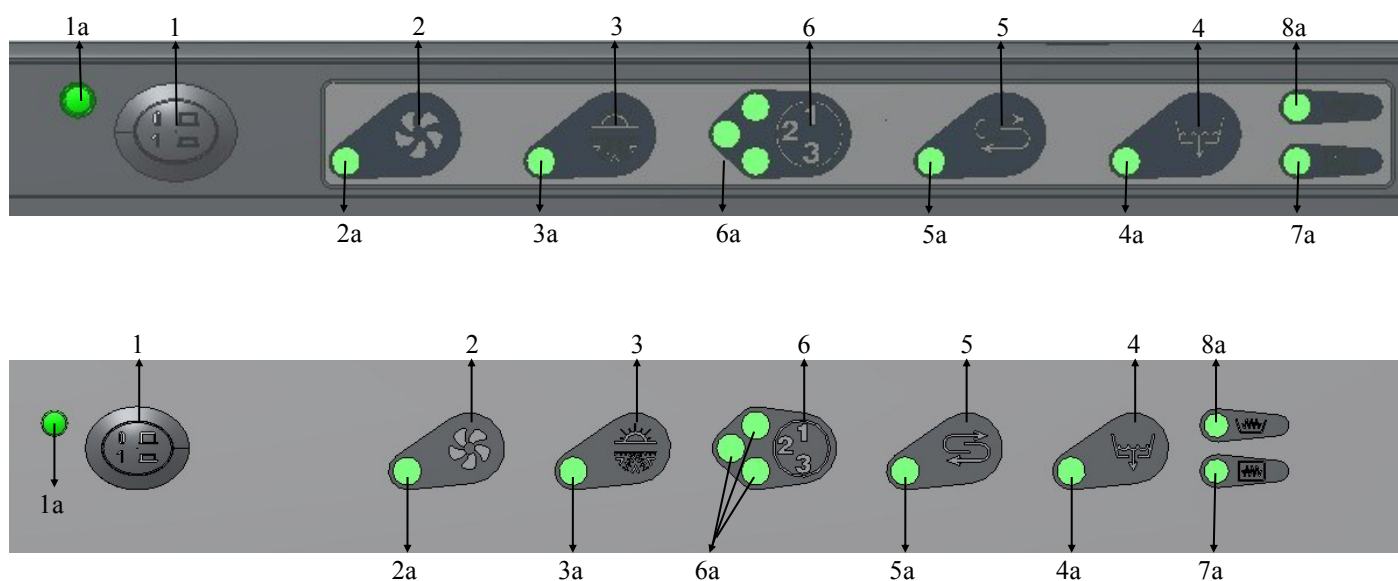**CONTROL PANEL**

| DESCRIPTION                        |      | N° |
|------------------------------------|------|----|
| SWITCH 0/1                         | 0  1 | 1  |
| LIGHT 0/1                          |      | 1a |
| WASH CYCLE SWITCH                  |      | 2  |
| WASH CYCLE LIGHT                   |      | 2a |
| COLD RINSE SWITCH                  |      | 3  |
| COLD RINSE LIGHT                   |      | 3a |
| DRAIN SWITCH SWITCH                |      | 4  |
| DRAIN LIGHT                        |      | 4a |
| WATER SOFTENER REGENERATION BUTTON |      | 5  |
| WATER SOFTENER REGENERATION LIGHT  |      | 5a |
| TIME SELECTION                     |      | 6  |
| TIME LIGHTS                        |      | 6a |
| BOILER ELEMENT LIGHT               |      | 7a |
| WASH ELEMENT LIGHT                 |      | 8a |


## **MACHINE DESCRIPTION**

The main features of an INDUSTRIAL DISHWASHER, unlike those of a DOMESTIC DISHWASHER, are different in their ability to wash large volumes of ware in a very short period of time. This requirement means that the design of an industrial machine is considerably different. Certain key parameters of an industrial machine differ by:

- The capacity of the basket;
- Features of the type of dishwasher;
- An industrial dishwasher is best served with demineralized water, with no impurities. Failing that, a soft or softened water supply should be used (no calcium, magnesium in the water);
- AISI304 heavy duty stainless steel boiler and machine construction;
- Automatic washing and rinsing system;
- Automatic water filling controlled by pressure switch;
- Thermostatically controlled wash and rinse temperature;
- Possibility to rinse glassware with cold water;
- Possibility to stop the cycle by opening the door;
- Automatically rinse aid pump;
- Incoloy tank and boiler elements.



## **ELECTRICAL SAFETY REQUIREMENTS**

- ◆ Before any cleaning or maintenance, when required, press the switch 0/1 on the position 0 and switch off electrical power at the main switch, turning it OFF (see picture).

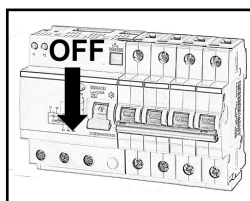

- ◆ Do not change the electrical power cable from the one provided. In case the power cable requires replacing, consult a qualified electrician to replace with Type Y.
- ◆ Verify that the electrical values supplied to the machine meet the demands as specified on the rating plate of the machine. If not, do not start the machine and call for service.
- ◆ Check that your electrical system complies with regulations and that the machine has been correctly earthed.
- ◆ Do not open the door of the dishwasher while it is running. There is a danger of being sprayed by hot water.
- ◆ Do not use the machine if the inlet water temperature around it is less than 5°C.
- ◆ Do not use water to wash the outside of the machine.
- ◆ Check that the incoming water pressure to the machine is between 2 and 4 bar (200 - 400 KPa).
- ◆ Do not remove panels from the machine. Only qualified technical service personnel should remove panels.


- ◆ In case of water leaks from the machine, switch off the electrical power and close the water supply.

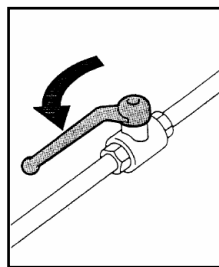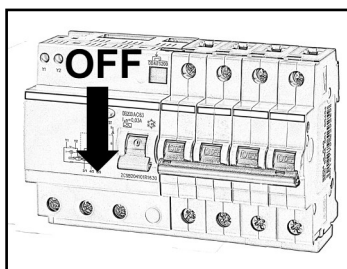

**ATTENTION**

**For the best results from your machine, change often the water in the tank.**

- ◆ When changing wash tank water or at the end of the day, visually check the bottom of the tank for soil and debris.

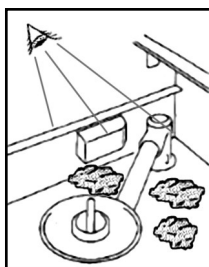

- ◆ If soils or debris are in the tank, remove them before starting a new cycle. This is suggested in order to guarantee a correct running of the machine.
- ◆ Always wear rubber gloves when cleaning the machine.
- ◆ Use caution when closing the door to avoid hands from becoming trapped!
- ◆ Do not use the dishwasher as a shelf.
- ◆ Do not stand on or put weight onto the open door. Danger of tipping over!

**ATTENTION**

**Do not let children or unauthorized, untrained persons, use the machine.**



## USER CHECKS

The following tests must be performed only by qualified personnel;


- ◆ Installation and commissioning;
- ◆ Water connection and electrical connection;
- ◆ Adjustment of the rinse aid dispenser and (if fitted) the detergent dispenser.

The user must perform the following daily checks:


- ◆ Check the correct connection of the inlet and drain tube and that the water supply is open.

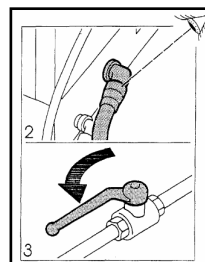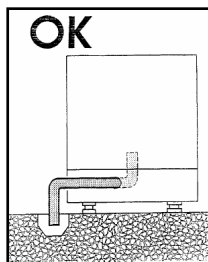

- ◆ Check that the main electrical switch is ON.

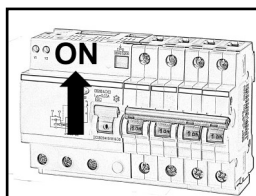

- ◆ Check the level in the rinse aid bottle (and detergent, if the machine is fitted with a detergent dispenser). Do not allow the chemical containers to become empty. If required, replace the bottle and check the correct sucking of the dispenser.

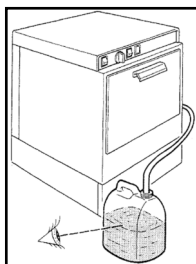

### ATTENTION

**Respect all safety rules when using corrosive chemical products. We recommend the use of gloves and goggles.**

**Every time you change the product (detergent or rinse aid) it is ABSOLUTELY NECESSARY to clean the peristaltic pump tube by immersing than in water for some cycles.**

**ONLY USE PRODUCTS DESIGNED FOR INDUSTRIAL DISHWASHING.**

**We recommend the replacing of the peristaltic pump tubes during a service call or at least every 12 months.**

**Failure to comply with these instructions will void the warranty on the machine.**



## **OBSERVATIONS BEFORE WASHING**

This machine was developed and designed especially to achieve energy savings. To further optimize the energy savings you can observe the following:

- ◆ Connect the machine to a hot water supply (max 50°C);
- ◆ Use the full capacity of the baskets, without overloading them;
- ◆ Follow the instructions of the chemical supplier.

Before loading the dishwasher, observe the following:

- ◆ Remove as much solid waste as possible, by hand, in order not to block filters, drain or jets of wash arms;
- ◆ Pre-flush with water;
- ◆ When washing items with soil of starch, protein blood or cheese, if very dry allow to pre-soak in COLD water before washing;
- ◆ When racking, be sure that all soiled surfaces can become exposed to the wash spray. Do not allow items to be “shielded” by other items;
- ◆ Insert the glasses and cups with the inside facing downward, avoid overlapping;
- ◆ Check that upper wash arms are not obstructed and that are free to rotate;
- ◆ For best results, we suggest to wash glassware, cutlery and cups separately to plates with a different water used for washing dishes;
- ◆ Do not wash dishes or cutlery in wood or with some wooden parts; in fact wood can warp and be damaged. In addition to this, glues used are not suitable for dishwashers. The consequence could be the detachment of handles or small parts.
- ◆ Pots in copper, pewter or aluminum, or thin glasses, decorated or made of crystal can damage if washed by a glass/dishwasher.

### **ATTENTION**

**Do not wash plastic kitchenware.**

- ◆ If the machine is not supplied with a detergent dispenser, hand dose the wash tank, referring to the chemical manufacturers instructions.
- ◆ Use only Industrial Dishwashing detergents.

### **ATTENTION**

**Observe all safety rules when using corrosive products. We recommend the use of gloves and goggles.**

- ◆ We recommend using a liquid type of detergent.
- ◆ For heavily soiled items, we suggest to rinse them with hot water.

## OPERATION

### ATTENTION

**The first operation of the dishwasher MUST be performed by authorized and qualified personnel who will also give instructions concerning the machine.**

- ◆ Open the dishwasher door and check whether the wash arms are installed. If not, install the wash arms (see Installation Manual) Verify that the suction filter pump is properly assembled. Insert the "overflow" pipe in the case of gravity discharge or check the correct positioning of the drain pump filter. Then close the door.
- ◆ **FILLING AND HEATING:**
  1. Pressing the switch 0/1 (1) to 1, the indicator light will turn on (1a) and the machine will make a check on the light. After that, the machine will set into a stand-by mode (the wash cycle light (2a) and regeneration light (5a, if foreseen, blinks).
  2. Pressing the cycle button (2) the machine will start to fill with water. During the filling the cycle light will blink.
  3. In this state the machine has full control over the tank and boiler temperatures, so if the temperature of the boiler is lower than the pre-set temperature, the machine will activate the boiler heating element, until when the correct temperature is reached. The boiler heater light (7a) will be on.
  4. Once the boiler has reached the set temperature, the heating element will turn off and accordingly the corresponding light (7a) will turn off. Then the machine will check the wash tank preset temperature and if it's lower, the heating element will activate until the correct wash temperature is reached. The wash tank heating elements is indicated by the corresponding light on the control panel (8a). When both temperature, boiler and tank, will be reached, both lights (7a and 8a) will be off.

### ATTENTION

**To achieve a good washing result, it is essential to wait until the machine has reached the correct temperatures (so when lights 7a and 8a are off).**

- ◆ **WASHING:**
  1. Select the cycle by switching (6) slow / medium / fast.
  2. Press the cycle button (2); the corresponding indicator light (2a) will turn on.
  3. Wait until the machine has finished the cycle.
  4. At the end of the cycle (light 2a off), open the door and remove the rack.

### ATTENTION

**The machines are equipped with interlock function. This device allows the machine to perform the rinse only when the minimum set temperature is reached. If the wash cycle has started before the rinse boiler heating lamp (7a) has switched off, then the wash cycle will continue until the set temperature is reached.**

**It is possible to deactivate the interlock function by modifying the DEEP SWITCH located on the electronic board (see page 16 - deep 4 ON).**

### ATTENTION

**Do not open the door until the machine has finished the cycle. In case the door is opened during the cycle, the cycle will stop. Automatically when you close the door, the cycle will continue from where it was interrupted.**

- ◆ **COLD RINSE BUTTON**
  1. Press and hold the cold rinse button (3). Then, the indicator light will turn on (3a). The machine will now rinse with cold water.
  2. Switch off the cold rinse button (3). The corresponding indicator light will turn off.

## ◆ REGENERATION OF WATER SOFTENER (optional equipment)

**ATTENTION**


It is necessary to perform the regeneration of the resins depending on to the degree of water hardness and the number of wash cycles performed.

The regeneration time is about 20 minutes. So, we suggest to run the regeneration when time allows.

If at the end of a wash cycle, the regeneration light blinks, it is because the machine needs to run a regeneration cycle.

Run the regeneration cycle as soon as possible.

1. Turn the machine off by switching the switch 0/1 to 0.
2. Open the door and check that there is no water inside the tank. If some water is present, completely empty the tank.
3. Unscrew the cap of the salt reservoir and fill the container with salt for water softeners. Then replace the cup. **Do not use cooking salt: it contains anti-caking agents which could damage the resin in the softener!** If during the filling operation some salt is spilled on the bottom of the tank, remove it immediately and rinse with water.

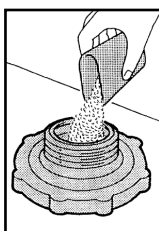


4. Remove the overflow from the machine (if machine is equipped with it).
5. Close the door and press the switch 0/1 to 1. The indicator light will turn on (1a) and the machine will make a control of lights. After that, the machine is placed in the stand-by mode (cycle light (2a) and regeneration light (5a) will blink.
6. Hold down the regeneration button (5) for 8 seconds, the indicator light will turn on (5a) and the regeneration cycle will start.
7. The cycle time to regenerate the water softener takes about 20 minutes. The cycle is finished when the water softener regeneration light turns off (5a) and the cycle light blinks (2a).
8. Press the cycle button and allow some water to enter the tank for about 1 minute. This is to rinse the tank from salt.
9. Turn off the machine selecting the switch 0/1 to 0, open the door and insert the "overflow" (if machine is equipped with it).
10. At this point, the resin regeneration cycle has been completed.

**ATTENTION**

Failure to regenerate the resin will result in rapid decay of the resin bed. Consequently, it can affect the normal functioning of the dishwasher. The manufacturer is not liable for any damage caused by failure to regenerate.

♦ AUTOMATIC DRAIN PUMP (optional equipment):

These models are not equipped with the "overflow" system and they should be used only when the discharge of water is placed above the water level in the tank.

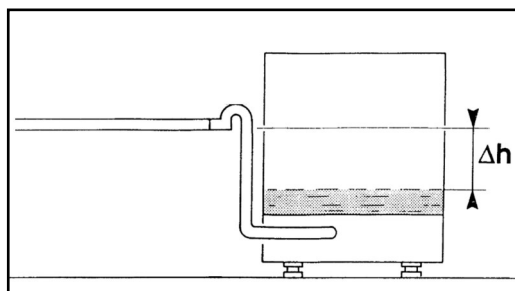

The drain pump automatically operates during the washing cycle while maintaining a constant water level in the tank. When you need to drain the water in the tank, proceed as follows:

1. With the machine switched on, switch 0/1 to 1 and hold the drain button (4) for 3 seconds.
2. The drain indicator light (4a) will turn on and the drain cycle will automatically start.
3. Wait until the light (4a) has turned off, open the door and check that the tank is completely empty. If there is still some water, repeat again the drain cycle.

## CLEANING

### CAUTION

**If you need to clean the tank, avoid using steel wool, ferrous or abrasives, or liquid detergents not suitable for cleaning stainless steel.**

**Do not use chlorine-based substances to avoid oxidizing the stainless steel (for example, bleach, or similar).**

**Clean the tank wearing rubber gloves.**

**Check that there are no pieces of glass or ceramic that could damage the rubber pipes.**


**Remove the filter basket only after rinsing the tank.**

**Change the water in the tank at least once a day, or whenever excessive soil or dirt are in the wash water.**


**Cleaning wash tank water will perform better cleaning results.**

### SQUARE BASKET MODELS:


1. Empty the dishwasher.
2. Turn the machine off by pressing the switch 0/1 to 0 and switch the main isolator off.
3. Remove the wash arm by unscrewing the center spindle and remove the mounting plate

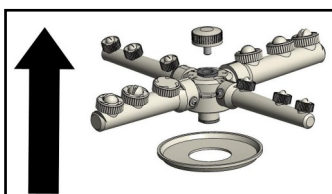


4. If the machine is fitted with the (optional) surface filter, remove it and wash it under running water.

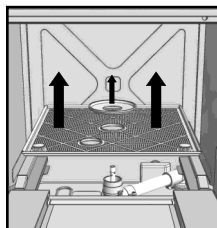

5. Check that no soils and debris are on the bottom of the tank. Remove them if necessary.

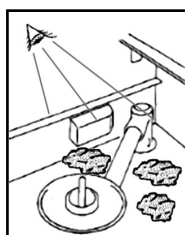

6. Remove the filter basket from the wash pump and wash it under running water.

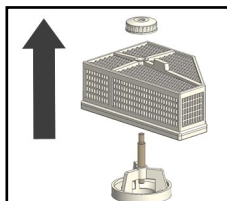


7. Reverse the assembly.
8. We suggest to run 2 filling / drain cycles in order to rinse the tank and the hydraulic system.


## WASH / RINSE ARMS - ROTATING TYPE

**ATTENTION****When clearing always wear rubber gloves**

1. Unscrew the centre spindle and lift out the wash arm.

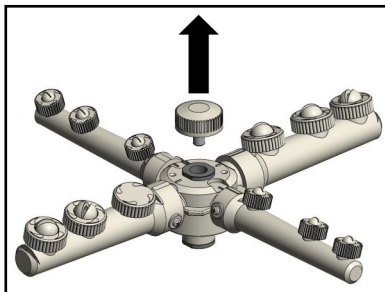


2. Unscrew the nuts (A1-A2) and remove the jets (B1-B2).

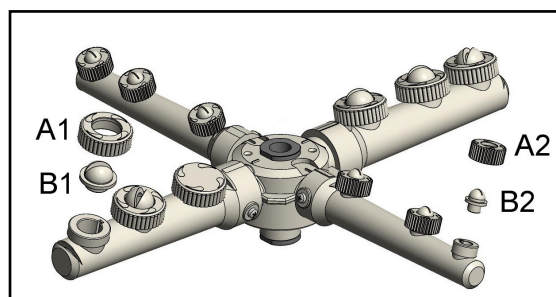

3. Immerse the jets in a solution containing some liquid descaling product (example: Vinegar)
4. Rinse with water. If necessary, clean the jets with a pin.
5. Check that there are no scale deposits on the arm or spindle.
6. Reverse the assembly.
7. It is suggested to wash and clean jets (B1) individually to avoid incorrect assembly.


## DIAGRAM OF THE CORRECT POSITION OF THE JETS

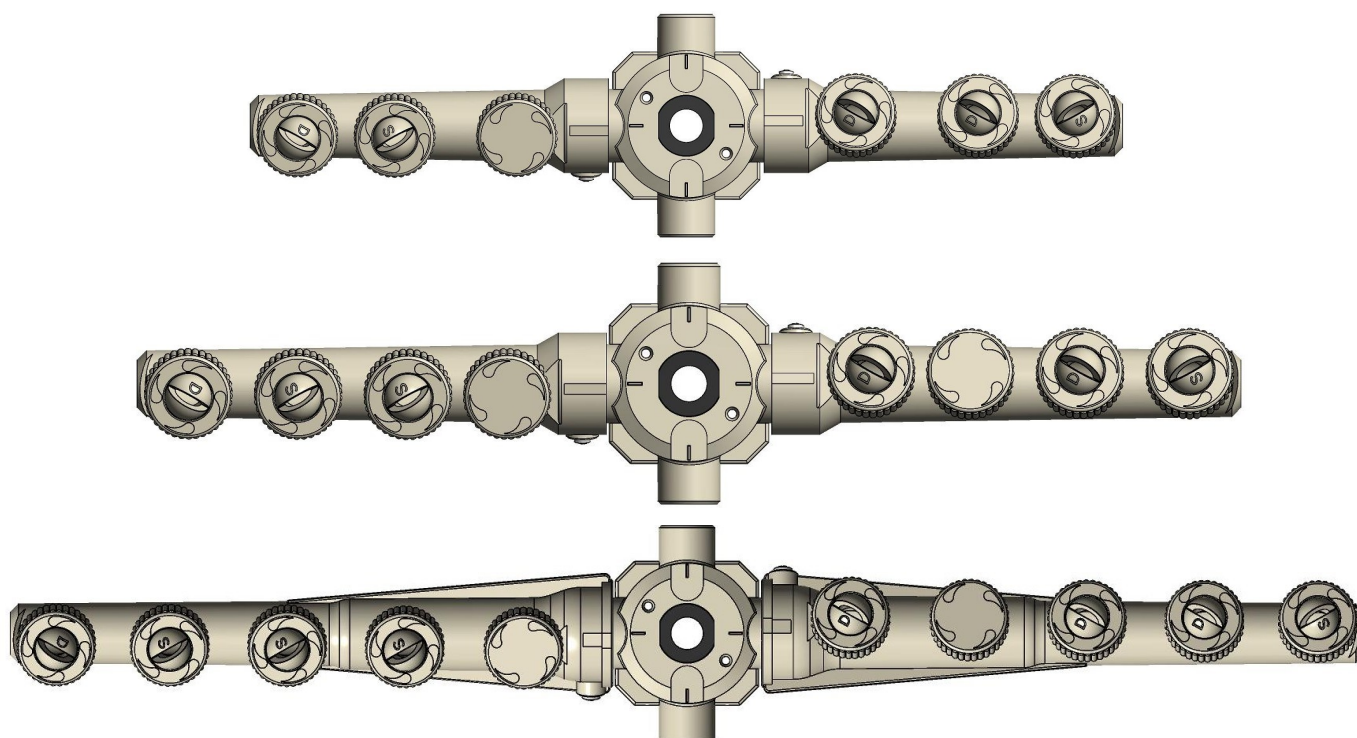

## RINSE ASSEMBLY

**ATTENTION****When clearing always wear rubber gloves.**

1. Carefully unscrew the jets and take out the rinse jet spinners.

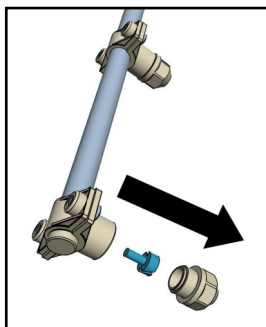

2. Immerse the jets in a solution containing some liquid descaling product (for ex. Vinegar).
3. Rinse with water. If necessary clean the jets with a pin.
4. Before replacing the jets and the spinners run a filling/draining cycle in order to clean the rinse assembly from soil or debris.
5. Replace the jets and the diffuser back onto the rinse assembly.

## **STATEMENT OF COMPLIANCE WITH EUROPEAN DIRECTIVE**

### **2002/95/CE RoHS**

In compliance with what is expressly required by European Directive 2002/95/EC (Restriction of Hazardous Substances in electrical and electronic equipment - RoHS) we declare full compliance with the Directive in question in the time and manner prescribed.



## **INFORMATION FOR USERS**

Under Article. 13 of Legislative Decree 25 July 2005, n. 151 "Implementation of Directives 2002/95/EC and 2003/108/EC on the reduction of hazardous substances in electrical and electronic equipment and waste disposal." The symbol as shown on the equipment indicates that at the end of the products life, it must be collected separately from other waste. The user should, therefore, take the equipment at the end of its useful life to a dedicated waste collection station where electrical and electronic items are handled. Alternatively, it can be returned to the dealer when buying a new equivalent product. The separate collection, and the subsequent forwarding for recycling, treatment and environmentally compatible disposal helps to avoid negative environmental and health issues and to promote the recycling of raw materials. Illegal disposal by the user may result in administrative penalties. These are provided for in the Legislative Decree number 22/1997 "(Article 50 and following of Legislative Decree number 22/1997).









