



dispenser & control panel

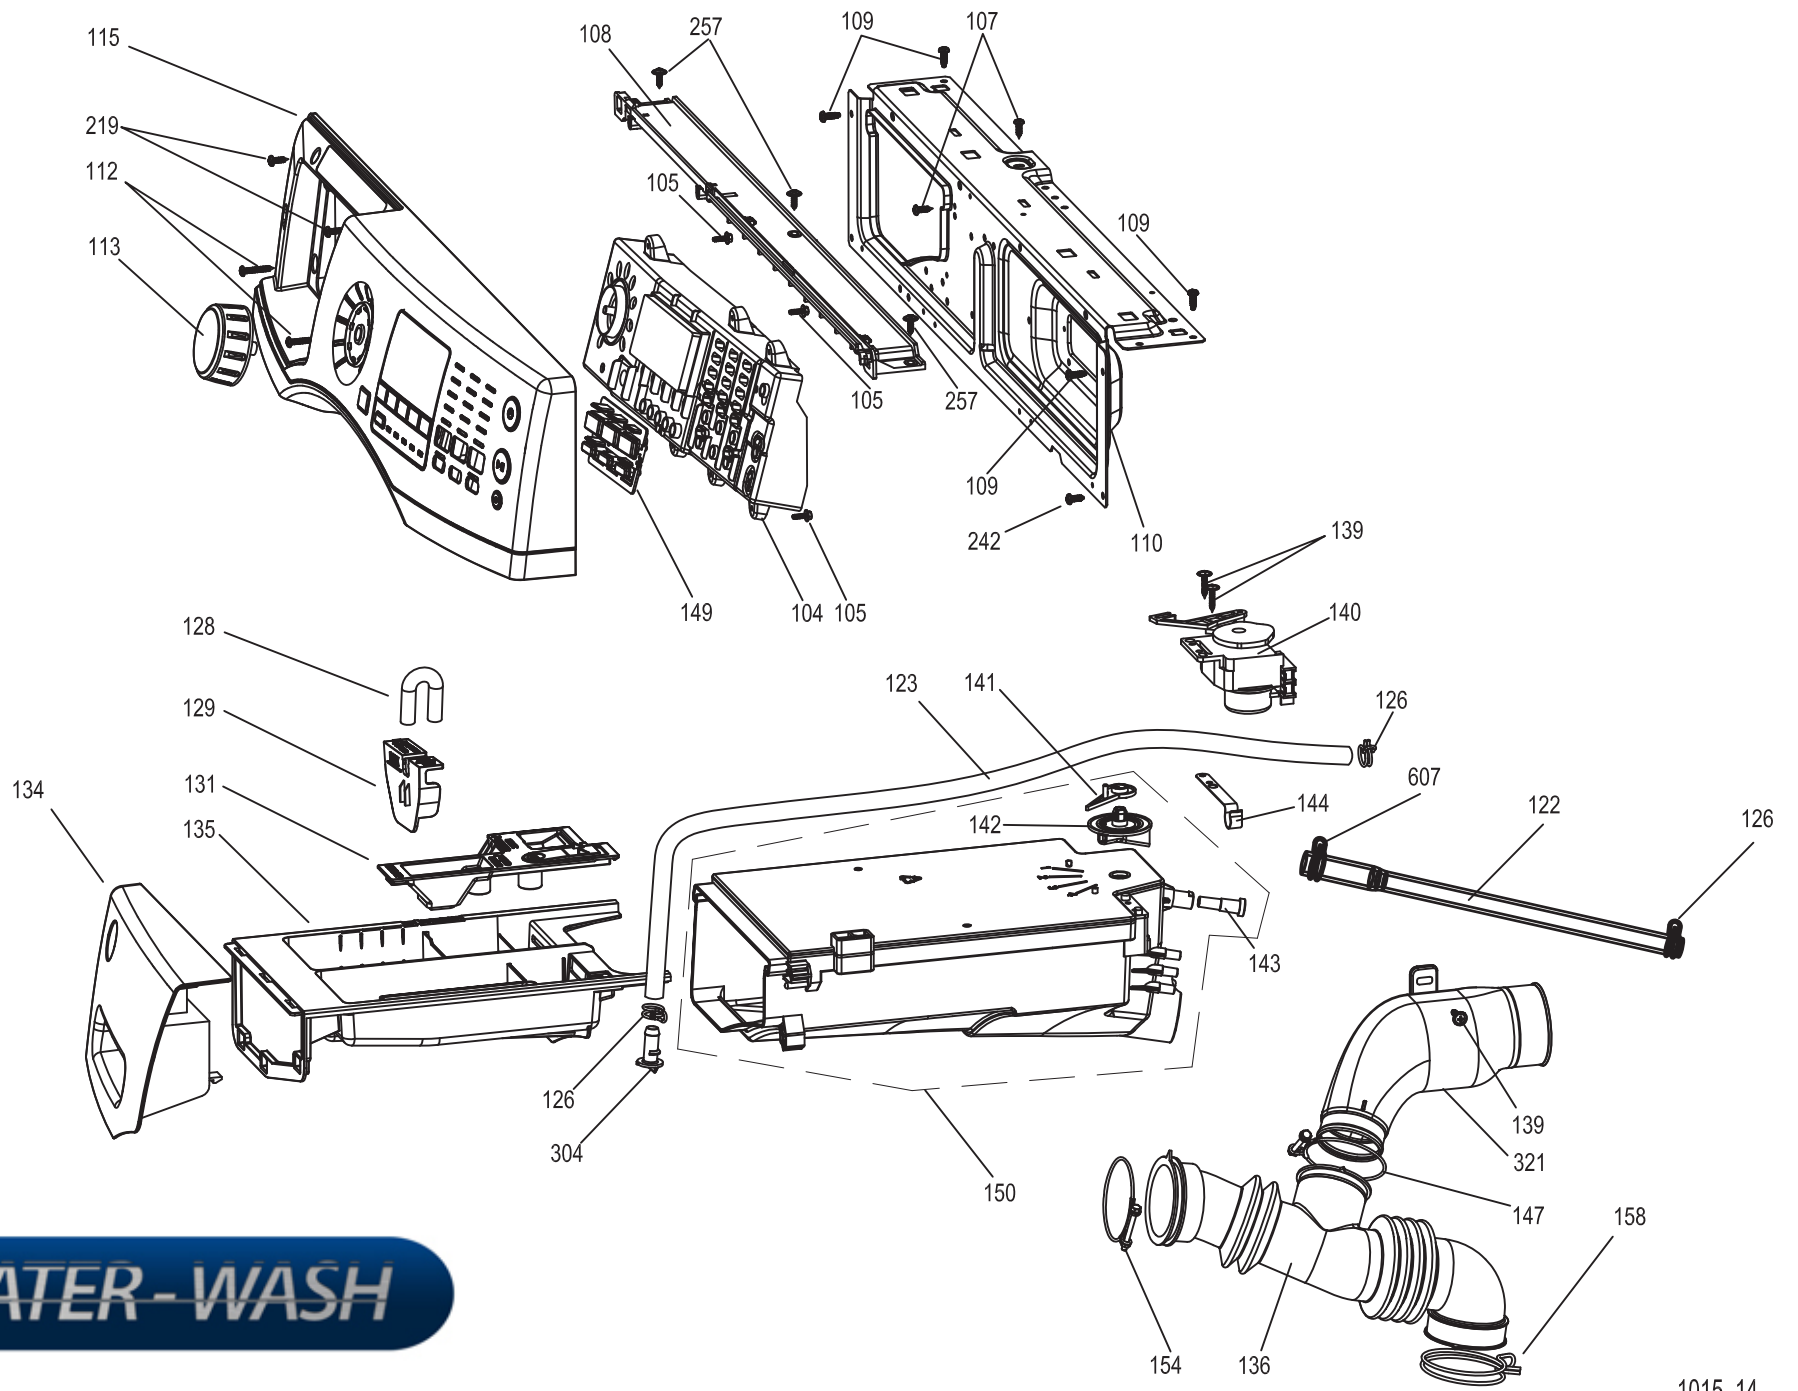

○ Non-Service Part


CABINET & TOP PANEL

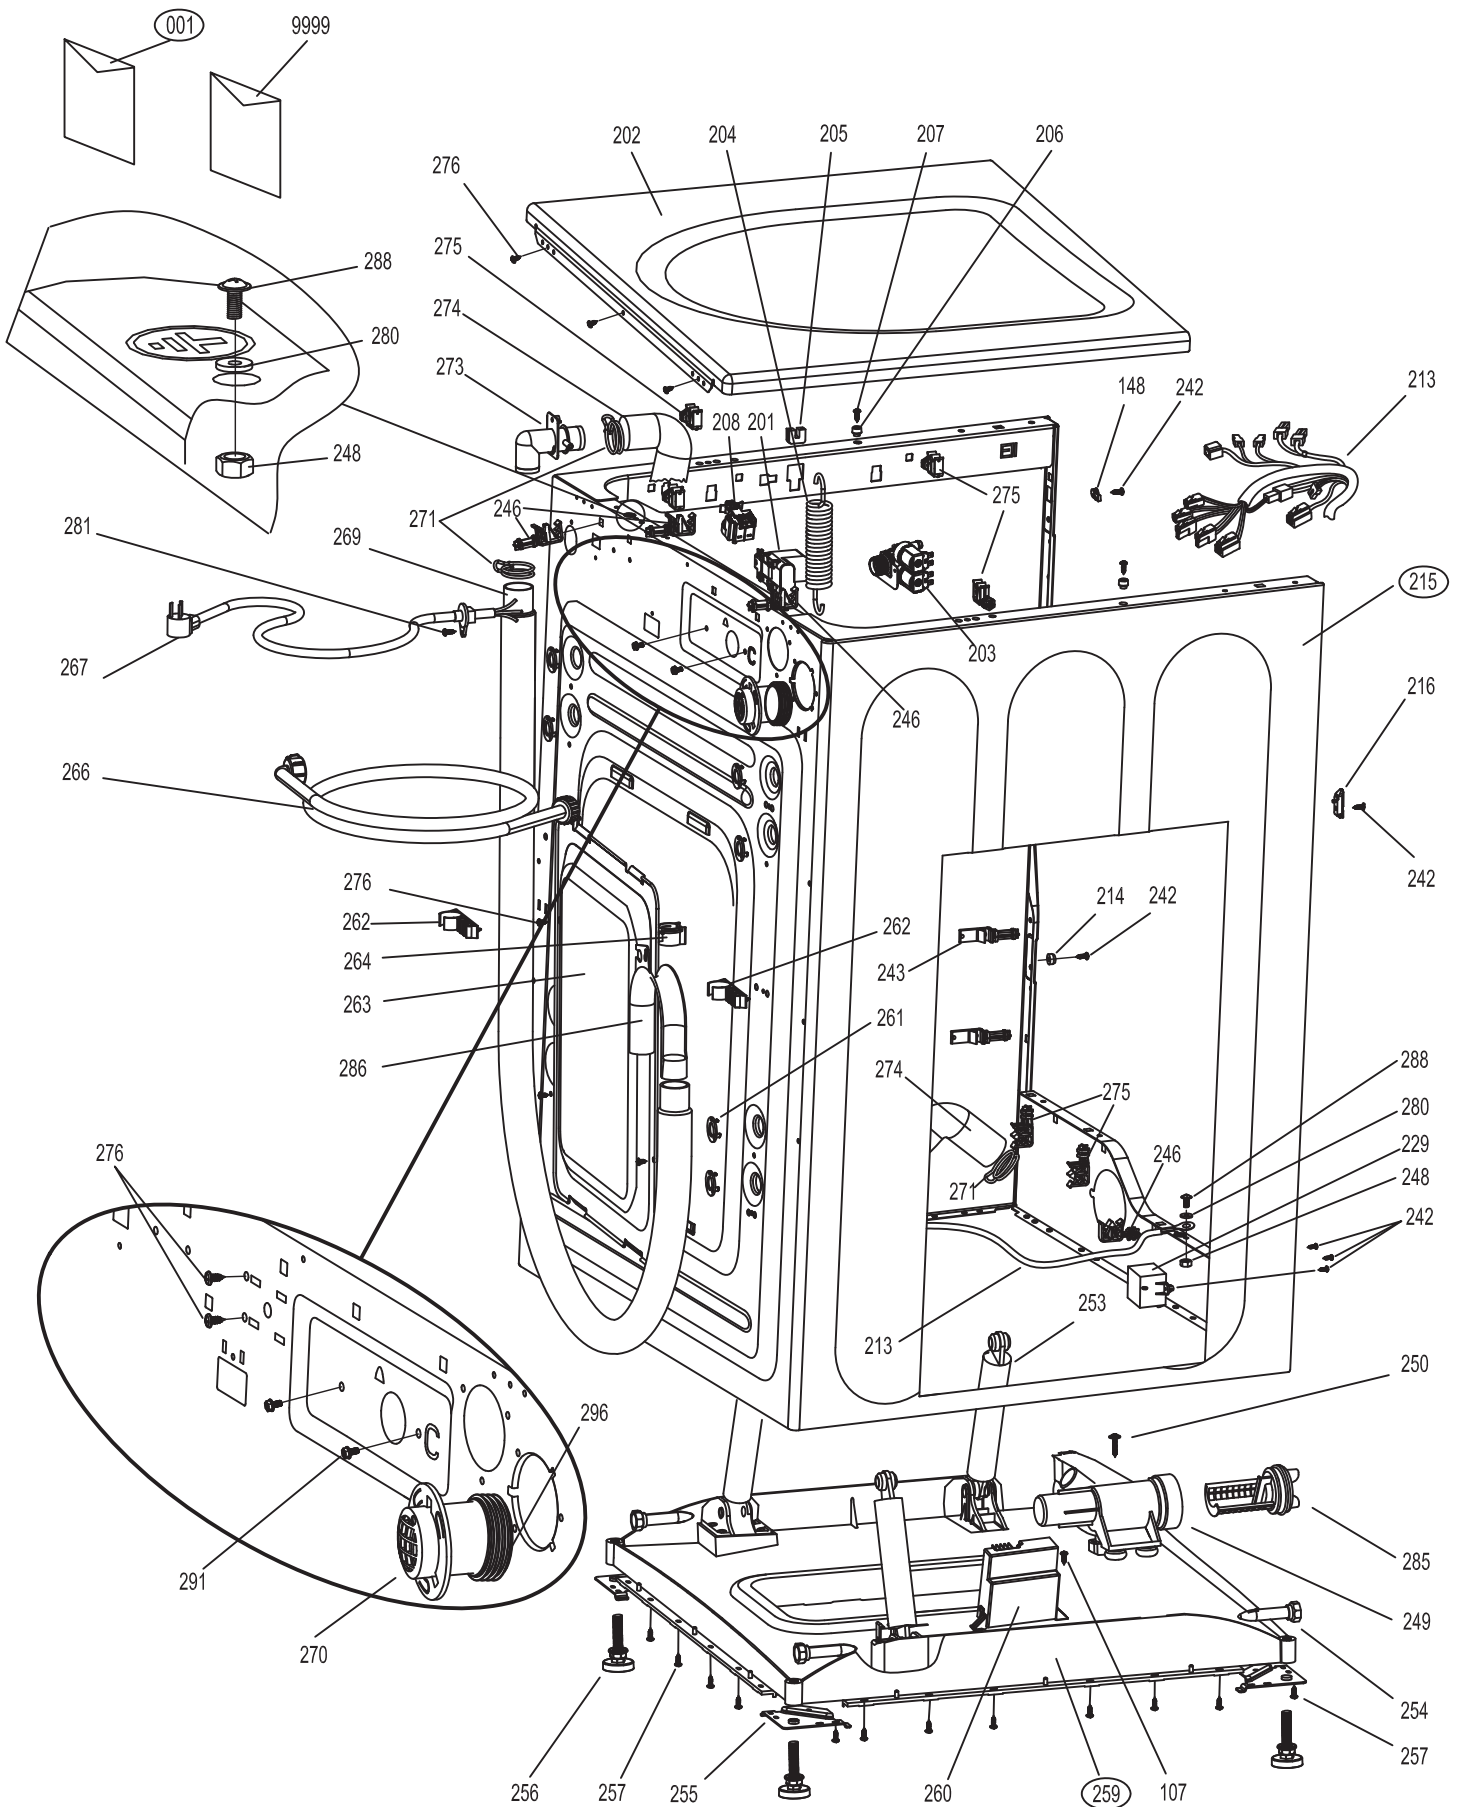


1015_14



FRONT PANEL & DOOR

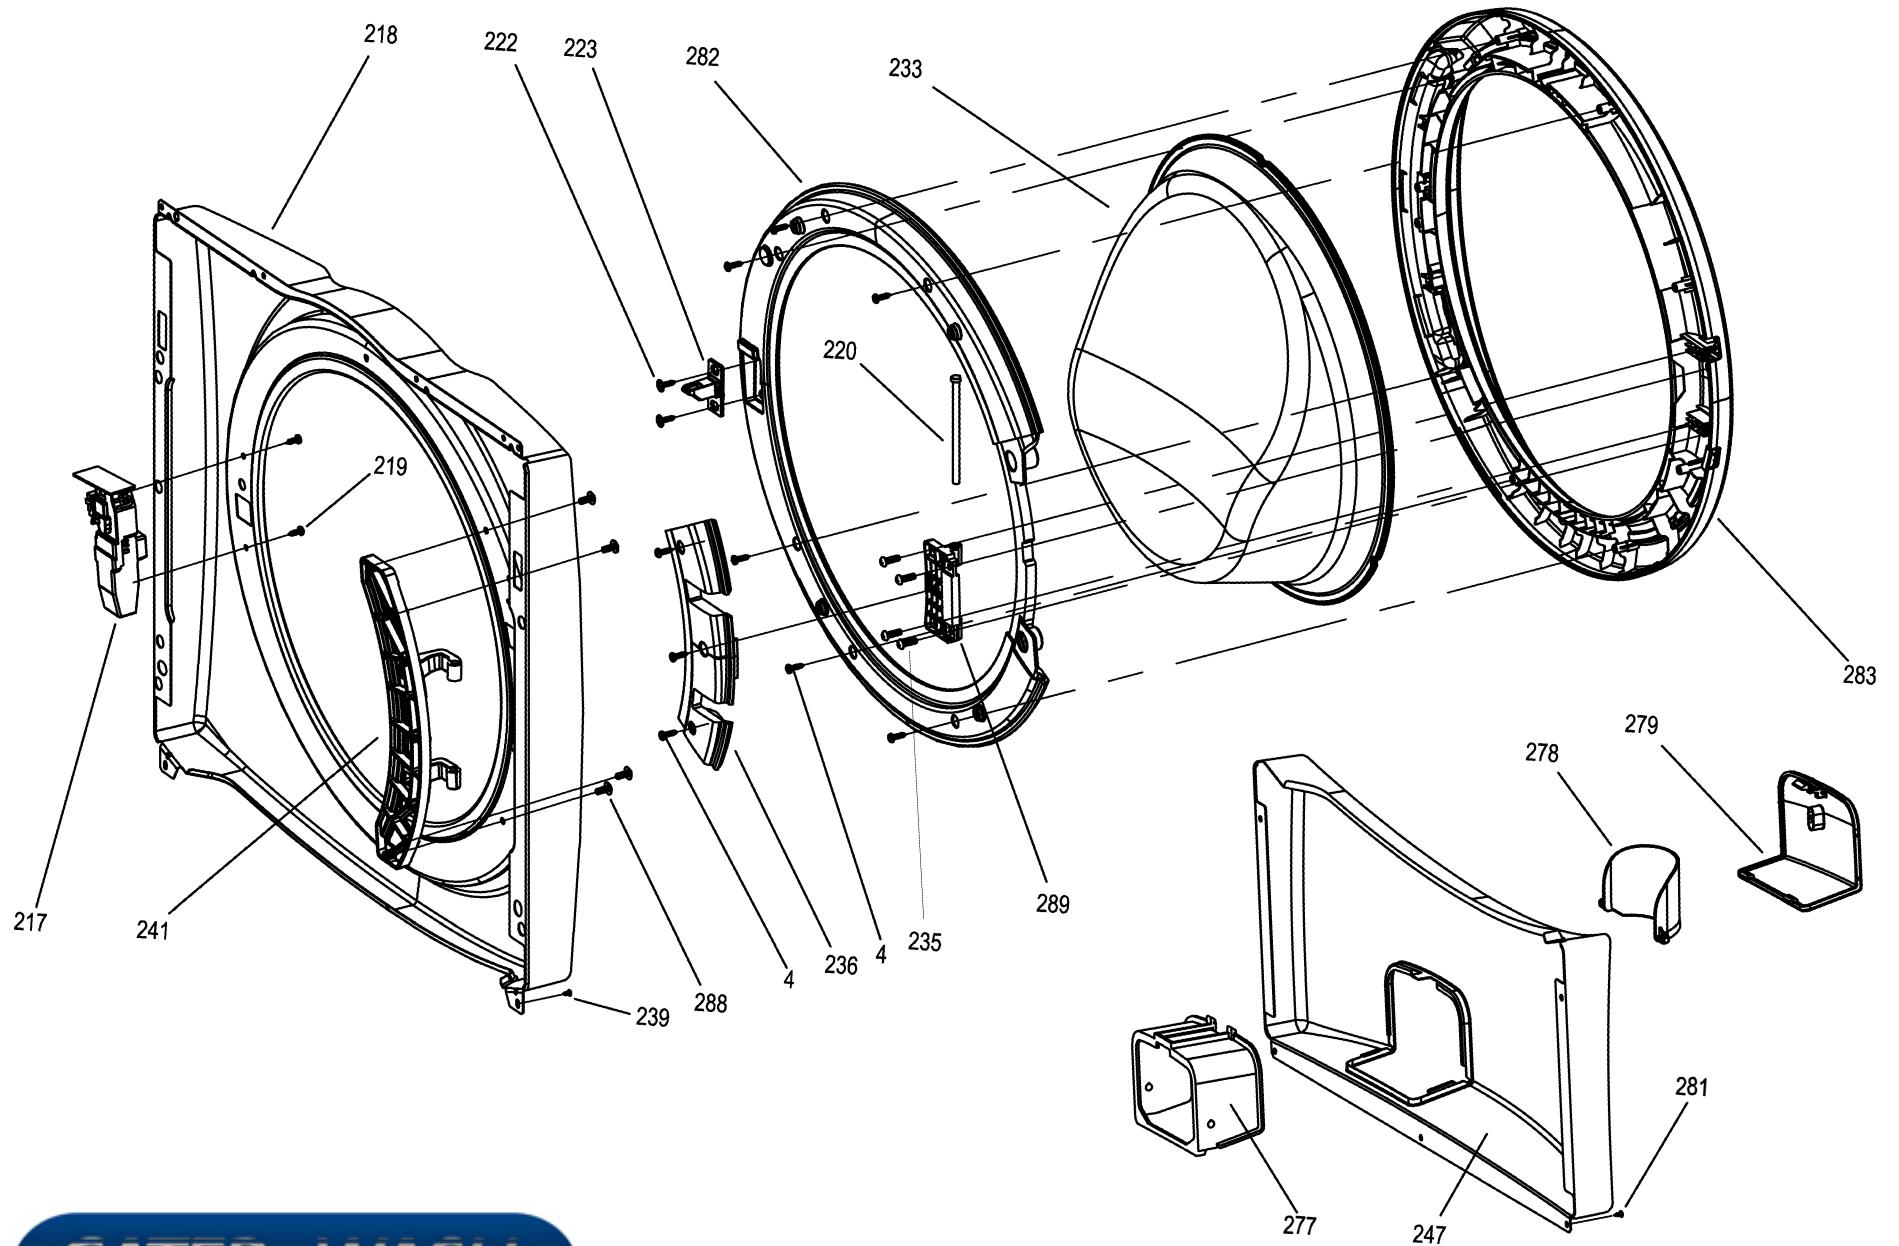

tub & motor

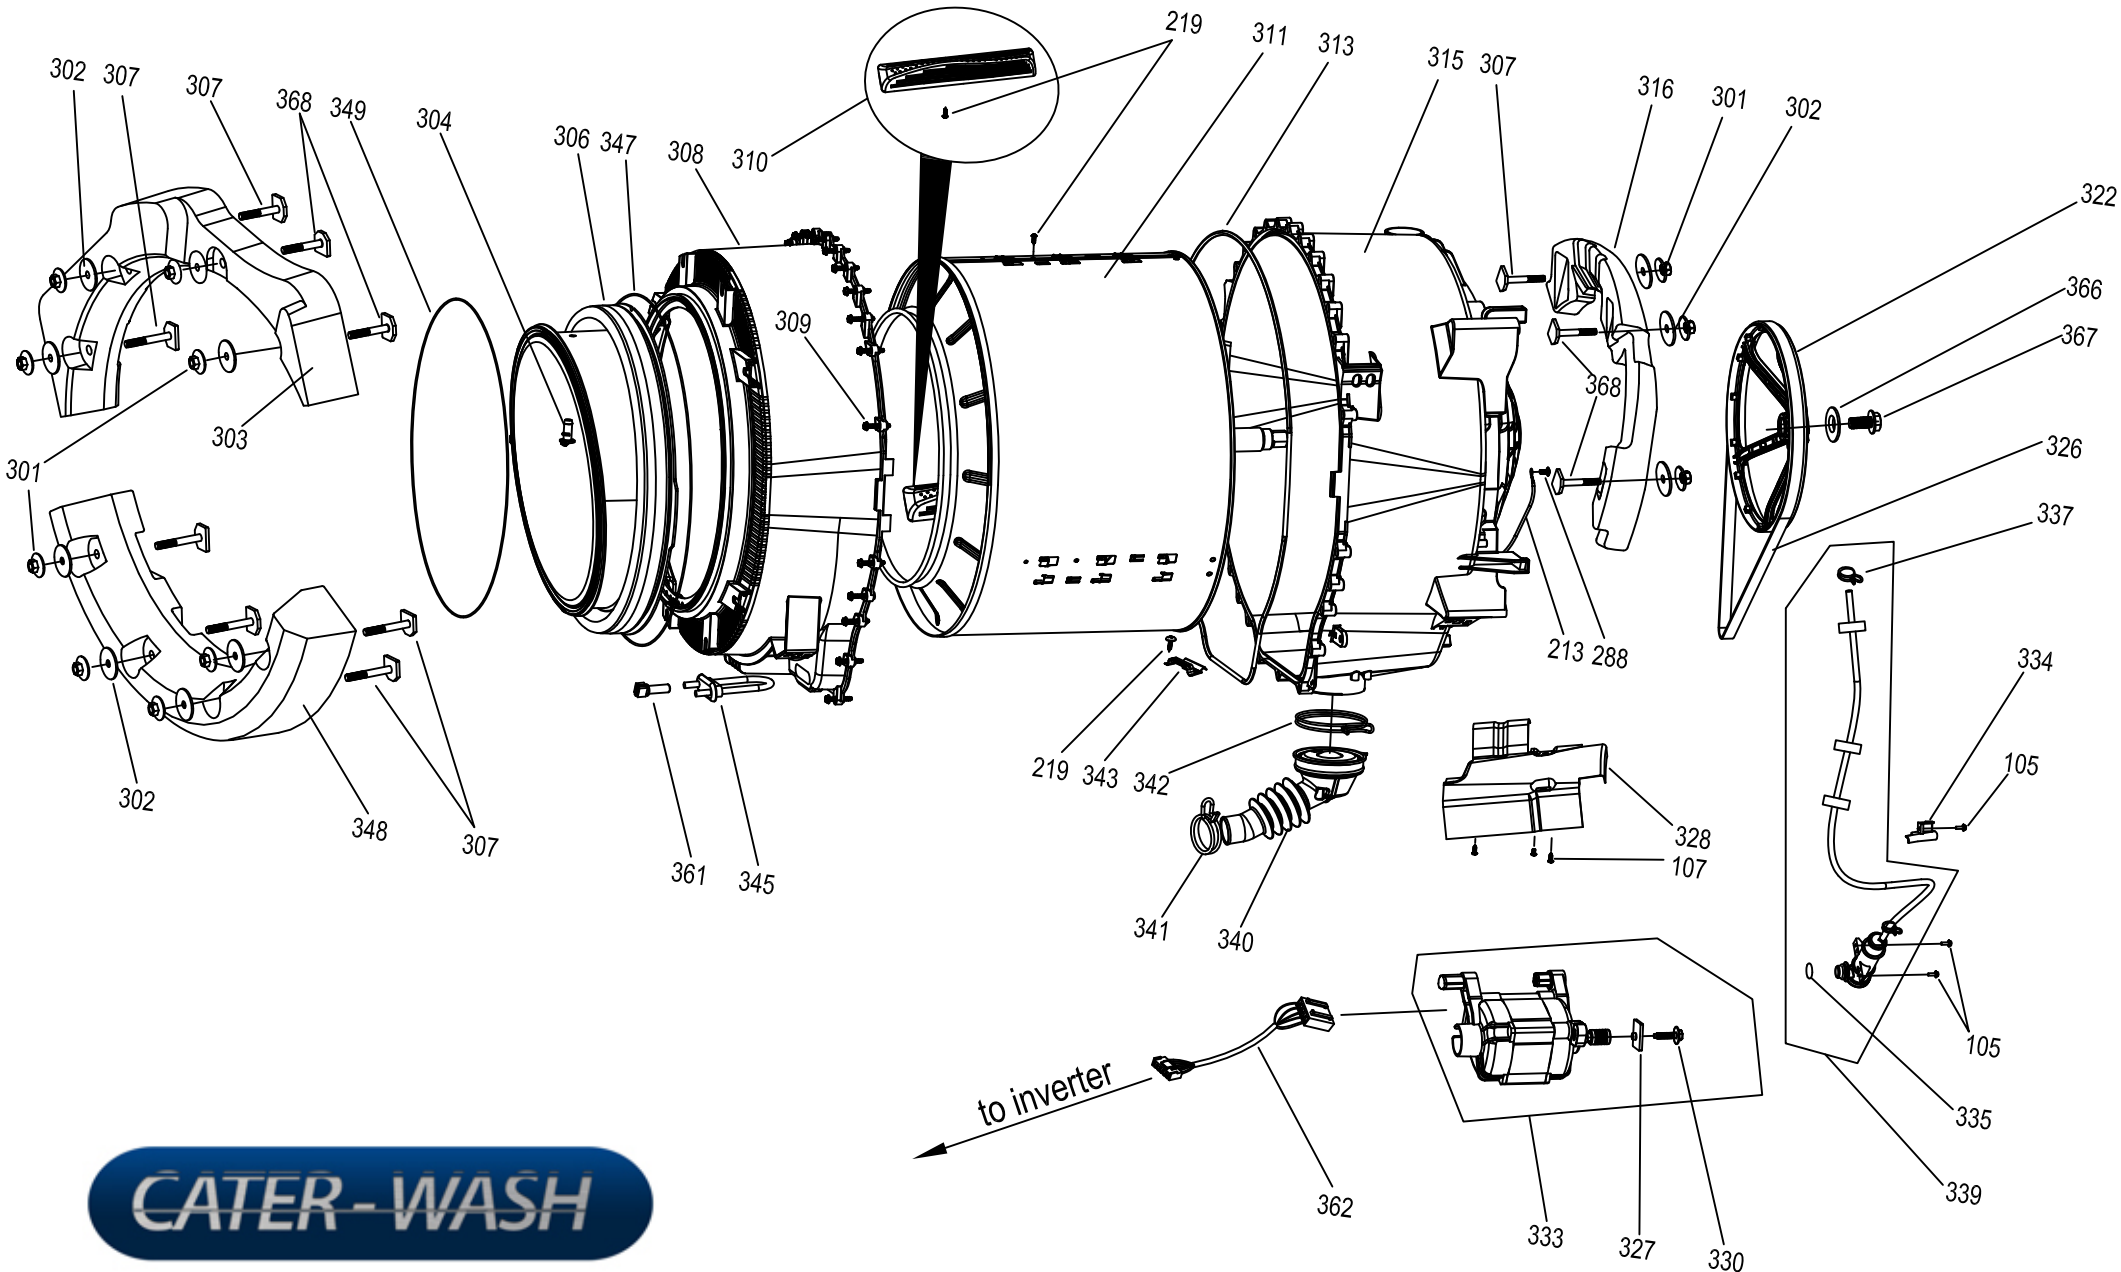

CK8518 18kg Washing Machine Parts List

Exploded Diagram Number	Stock Code	Description
134	CKP0823	Detergent draw handle
135	CKP8823	Detergent draw
131	CKP0217	Softener bleach cover
129	CKP0224	Liquid detergent insert
128	CKP0219	Siphon pipe
113	CKP8512	Control knob
115	CKP8578	Front control panel
149	CKP0722	Buttons
104	CKP8518	Control board
110	CKP8219	Detergent draw, PCB, control panel support
150	CKP8878	Detergent draw hold box
202	CKP8152	Top panel
204	CKP0223	Suspension spring
205	CKP0220	Spring hanger
203	CKP0815	Solenoid valve
267	CKP2458	Plug
215	CKP7859	Side panel
253	CKP0222	Damper
254	CKP0216	Damper pin
285	CKP0705	Drain pump filter
249	CKP0226	Drain pump
256	CKP0221	Foot
270	CKP9152	Baffle
286	CKP8882	Drain hose guide
263	CKP8704	Back panel
266	CKP0142	Universal cold inlet hose
310	CKP8546	Drum guide
345	CKP0777	Heating element
306	CKP0230	Rubber gasket/ door seal
308	CKP1107	Front plastic tub
311	CKP0771	Stainless steel drum
315	CKP6458	Back plastic tub
340	CKP0824	Drain pipe
341	CKP0718	Pump clamp for drain pipe
333	CKP0702	Motor ASM kit
362	CKP0821	Wiring harness for motor
328	CKP0714	Inverter
349	CKP0225	gasket inside with clamp
347	CKP0227	Gasket outer clamp
233	CKP1818	Glass door
217	CKP0819	Door lock
241	CKP0881	Door hinge
223	CKP0715	Door lock positioning pin
279	CKP0818	Front cover for filter
218	CKP7588	Front panel
247	CKP9589	Bottom service panel
326	CKP0332	Ribbet drive belt
	CKP0711	Bearings

