


# Do I Need a Drain Pump?

## Without Drain Pump - Gravity Waste.

Water from the waste outlet on the glass or dishwasher enters the drain beneath the machine .

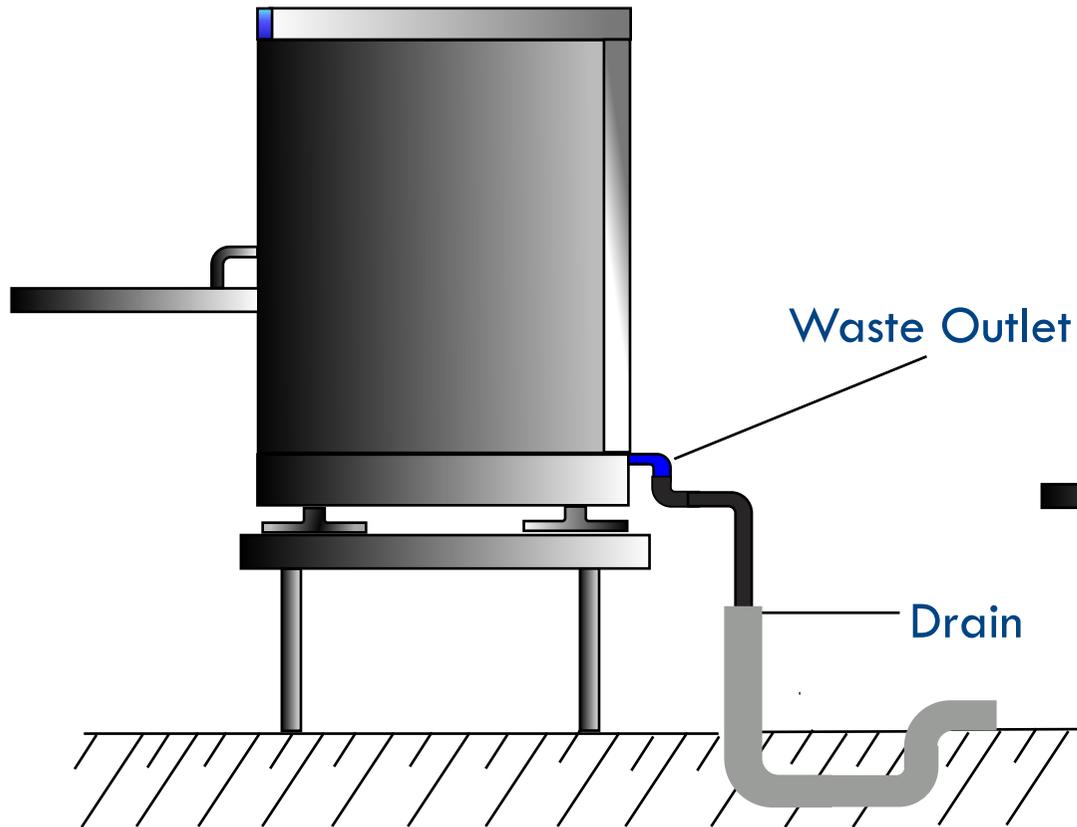

## With Drain Pump - Pumped Waste.

When the drain is level with or above the machine's waste outlet, water needs to be pumped upwards into a stand pipe..

