









Machine	Explode	Code	Description
Buffalo Freestanding Induction Cooker Two Zones	1	AN874	Ceramic Glass
Buffalo Freestanding Induction Cooker Two Zones	2	AN875	Stainless Steel Top Cover
Buffalo Freestanding Induction Cooker Two Zones	3	AN877	Sensor
Buffalo Freestanding Induction Cooker Two Zones	4		Alu Sheet for Coil
Buffalo Freestanding Induction Cooker Two Zones	5	AN878	Coil
Buffalo Freestanding Induction Cooker Two Zones	6	AN879	Spring
Buffalo Freestanding Induction Cooker Two Zones	7	AN880	Heating Coil Bracket
Buffalo Freestanding Induction Cooker Two Zones	8	AN881	Iron Support for Heating Coil
Buffalo Freestanding Induction Cooker Two Zones	9	AN882	PCB Box
Buffalo Freestanding Induction Cooker Two Zones	10	AN883	Connecting Cable
Buffalo Freestanding Induction Cooker Two Zones	11	AN884	Metal Bracket
Buffalo Freestanding Induction Cooker Two Zones	12	AN885	Kick Thermostat
Buffalo Freestanding Induction Cooker Two Zones	13	AN886	Air Filter
Buffalo Freestanding Induction Cooker Two Zones	14		Power Cord
Buffalo Freestanding Induction Cooker Two Zones	15		Fit for Power Cord
Buffalo Freestanding Induction Cooker Two Zones	16		Patch Board for Power Cord
Buffalo Freestanding Induction Cooker Two Zones	17	AN887	Fan
Buffalo Freestanding Induction Cooker Two Zones	18		Iron Back Plate
Buffalo Freestanding Induction Cooker Two Zones	19		Stainless Steel Housing
Buffalo Freestanding Induction Cooker Two Zones	20		Control Panel
Buffalo Freestanding Induction Cooker Two Zones	21		Control Panel Metal Box
Buffalo Freestanding Induction Cooker Two Zones	22	AN888	Knob
Buffalo Freestanding Induction Cooker Two Zones	23	AN889	Indicator Light
Buffalo Freestanding Induction Cooker Two Zones	24	AN890	Rear Castor
Buffalo Freestanding Induction Cooker Two Zones	25		Front Castor (With Brake)